



NUVO IRON



EASY TO INSTALL 8" TEE HINGES

FACILE À INSTALLER CHARNIÈRES EN T DE 8 po

- Easily adapts to any of your gate or door projects and works with inward, outward, left or right configurations.
- Designed to keep your gates and doors opening smoothly.
- From gates, animal pens, sheds and more, they're perfect for a variety of projects.
- Its sleek design and durable construction make it great for everyday use.

- S'adapte facilement à tous vos projets de portillon ou de porte et fonctionne avec des configurations s'ouvrant vers l'intérieur, vers l'extérieur, à gauche ou à droite.
- Conçues pour faciliter l'ouverture de vos portillons et vos portes.
- Parfait pour une variété de projets notamment les portillons, les enclos d'animaux, les remises et plus encore.
- Son design élégant et sa construction durable le rendent parfait pour une utilisation quotidienne.

INSTALLATION INSTRUCTIONS:


Use care not to over-torque the screws. Pre-drilling is recommended.

- Position the straps on the gate, centering the screw locations on the upper and lower gate frame. The edge of the strap should be flush with the gate edge.
- Mark the screw locations. Drill pilot holes of sufficient size. Attach the straps using the screws provided.
- Position the gate in the opening, allowing adequate ground clearance.
- Place the pad on the post or fence. The knuckle should be in the gap between the gate and fence.
- Mark the screw locations. Drill pilot holes of sufficient size. Attach the pad using the screws provided.

INSTRUCTIONS D'INSTALLATION :

Veillez à ne pas trop serrer les vis. Le préperçage est conseillé.

- Placer les courroies sur le portillon en centrant les trous pour les vis sur le cadre supérieur et le cadre inférieur du portillon. Le rebord de la courroie doit être à niveau avec le rebord du portillon.
- Marquer l'emplacement des vis. Percer des trous pilotes de taille suffisante. Fixer les courroies à l'aide des vis fournies.
- Placer le portillon dans l'ouverture, de sorte que l'espace de dégagement par rapport au sol soit adéquat.
- Repérer la plaquette sur le poteau ou la clôture. Le charnon doit se trouver dans l'espace entre le portillon et la clôture.
- Marquer l'emplacement des vis. Percer des trous pilotes de taille suffisante. Fixer la plaquette à l'aide des vis fournies.

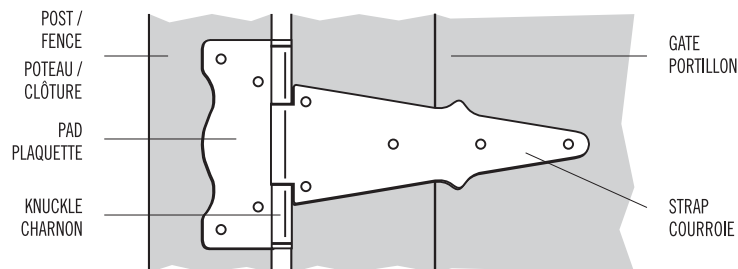

Nuvo Iron™, its advertising agency and delegates have made every effort to ensure the accuracy of all measurements and other details in these instructions and we anticipate no problems to arise. However, we cannot be responsible for errors beyond that effort. Therefore, always double-check details before beginning your project. Nuvo Iron™, its advertising agency and delegates shall not be held responsible for injury, damage or any other loss, however caused, resulting from the information contained in these instructions.

Nuvo Iron™, son agence de publicité et ses représentants ont fait tous les efforts nécessaires pour assurer l'exactitude des mesures et des autres détails contenus dans ces instructions, et ne prévoient aucun problème. Toutefois, nous ne pouvons être tenus responsables des erreurs survenant malgré les efforts déployés. Vous devez donc toujours vérifier les détails avant de commencer votre projet. Nuvo Iron™, son agence de publicité et ses représentants ne peuvent être tenus responsables de toute blessure, de tout dommage ou de toute autre perte liés aux renseignements contenus dans les présentes instructions, et ce, peu importe la cause.