



# ROYAL RAILING COLLECTION

## COLLECTION DE GARDE-CORPS ROYAL

# RRC32LP-13CC

31 1/8" PO

BALUSTERS  
BALUSTRES



LUXEMBOURG

## SQUARE BALUSTERS FOR DECK RAILING

## BALUSTRES CARRÉS POUR GARDE-CORPS DE TERRASSE


### NOTE / REMARQUE :

- Package contents will cover an average of 4.5 linear feet (137.2 cm) of railing.
- Le contenu de l'emballage couvrira une moyenne de 137,2 cm (4,5 pieds linéaires) de garde-corps.

### TYPICAL DECK INSTALLATION:

- Measure railing opening from post to post to determine the length of each baluster rail section.
- Cut your top and bottom rails according to the opening of your posts.
- To ensure accurate rail lengths, subtract the thickness of the rail connectors from the final measurement.
- Clamp together. Mark top and bottom rails 4 1/2" (11.4 cm) on-center, starting at the center of the rails (see Fig. 1). Ensure baluster to post spacing will not exceed 4". Fasten connectors on the center of the marks made on both rails (Fig. 2).
- Then, un-clamp the rails. With your top rail on it's side, and against a stable surface, attach each baluster to the connectors.
- Note:** If you're using a style with alternating baluster designs, start at one end of the rail with the baluster that has the least number of decorative collars. From there, alternate between the different styles as you work your way across.
- Once the balusters are attached to the top rail, grab your bottom rail and align the connectors to the balusters. We suggest seating them into the connectors until the full section is aligned.
- Once they are all seated in place, use a rubber mallet to secure and attach the section together.
- To determine where to install the section on your post, measure and mark the finished height required. This measurement is taken from the surface of the deck to where the top of the railing would install. Typically this measurement is 42".

If a handrail will not be used, you will have more space at the bottom of the section. Ensure this gap does not exceed 4".

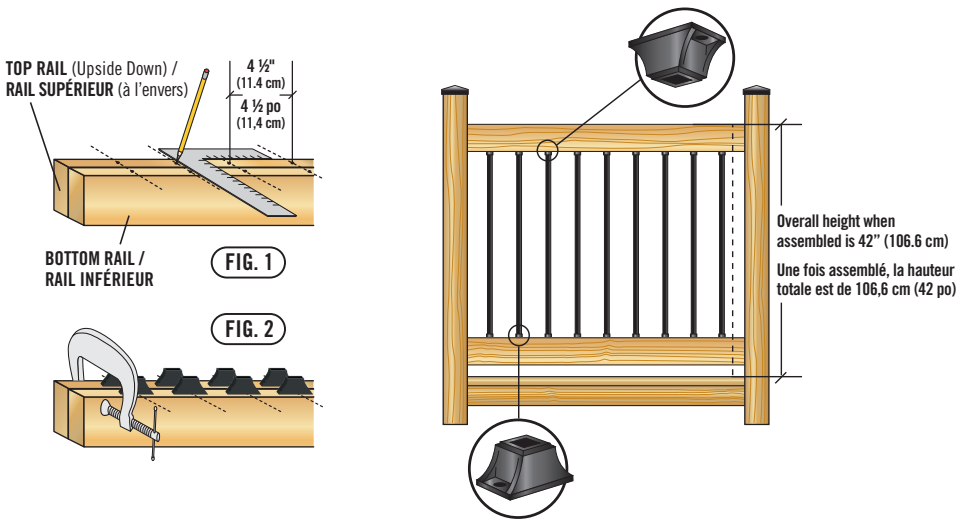


### INSTALLATION NORMALE DE TERRASSE :

- Mesurer l'ouverture du garde-corps d'un poteau à l'autre pour déterminer la longueur de chaque section de rail pour balustres.
  - Couper vos rails supérieur et inférieur en fonction de l'ouverture de vos poteaux.
  - Pour garantir des longueurs de rail précises, soustraire l'épaisseur des connecteurs de rail de la mesure finale.
  - Les fixer ensemble. Marquer le centre des rails supérieur et inférieur de 11,4 cm (4-1/2 po), en commençant au centre des rails (voir Fig.1). Veiller à ce que l'espacement entre les balustres et les poteaux ne dépasse pas 4 po. Fixer les connecteurs au centre des marques faites sur les deux rails (Fig. 2).
  - Ensuite, desserrer les rails. Avec le rail supérieur sur le côté et contre une surface stable, fixer chaque balustre aux connecteurs.
  - Remarque :** Si vous utilisez un style avec des balustres alternés, commencer à une extrémité du rail avec le balustre qui a le moins de colliers décoratifs. À partir de là, alterner entre les différents styles au fur et à mesure que vous progressez.
  - Une fois les balustres fixés au rail supérieur, saisir le rail inférieur et aligner les connecteurs sur les balustres. Nous vous conseillons de les insérer dans les connecteurs jusqu'à ce que toute la section soit alignée.
  - Une fois qu'ils sont tous en place, utiliser un maillet en caoutchouc pour fixer et attacher la section ensemble.
  - Pour déterminer l'endroit où installer la section sur votre poteau, mesurer et marquer la hauteur finie requise. Cette mesure est prise à partir de la surface de la terrasse jusqu'à l'endroit où le haut du garde-corps serait installé. En général, cette mesure est de 42 po.
- Si vous n'utilisez pas de rampe, vous aurez plus d'espace au bas de la section. Veiller à ce que cet espace n'excède pas 4 po.

**IMPORTANT:** Prior to construction, check with your local or regional municipalities for building code requirements in your area.

**IMPORTANT:** Avant la construction, consultez votre municipalité locale ou régionale pour connaître les exigences du code du bâtiment dans votre région.


nuvoiron.com • 1.866.955.0355 • info@nuvoiron.com



nuvoironfencing



nuvoiron



nuvoiron



nuvoiron

RRC32LP-13CC

